STEP 4 scratcheds. Refer steps provided as assembling guide. wooden furniture part on a clean and flat soft surface to prevent for guidance. Be sure all parts are complete, before assembling. Place all STEP 1 3. Hardware are to be kept out of reach from children. Read this instruction carefully. Refer hardware and furniture parts list Product Code: 2880 2.To prevent thread damage. Ensure that nuts or nut bolts are not over-tighten. 1.Do not FULLY-TIGHTEN the nuts or nut bolts until all are in place. CAUTIONS: m tol ASSEMBLY INSTRUCTIONS STEP 5 STEP 2 ITEM O œ Ѿ WIRE CAP Ø35 STRENGTHEN RAIL SHORT STRENGTHEN RAIL LONG BACK LEG FRONT LEG-RIGHT FRONT LEG-LEFT TABLE TOP SET DESCRIPTION PART LIST (0)1 PC COMPLETED ASSEMBLY STEP 3 2 PCS 1 PC 1 PC QTY ITEM 2 PCS 1 PC 1 PC FLAT WASHER 1/4" SPRING WASHER 1/4" ALLEN KEY (BALL SHAPE) MINIFIX 24MM JCBC SCREW M6 x 50MN PLASTIC CAP WOOD DOWEL Ø8 x 30MM 288 DESCRIPTION HARDWARE LIST 0 \$ 9 0 0 DESK SD4 8 S PCS 1 PC 8 PCS 6 SETS 6 PCS 12 PCS 9 SK-T899-1