

ASSEMBLY INSTRUCTIONS

20013 - Creme Beige garden set Le Bonom Vistdal

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the uphols tery.



A:1PC



B:1PC



C:2PCS



D:2PCS



E:1PC



F:2PCS



G:4PCS



H:1PC



I:2PCS



J:1PC



K:1PC



L:2PCS



M:1PC



N:20PCS



O:4PCS



P:4PCS




Q:1PC





R:1PC

Do not fully tighten bolts until assembly is complete. Assemble the table leg(I) to the table top(H), using bolt , washer and total nut(N&O&P).


not fully tighten bolts until assembly is complete. Assemble the sofa leg(B) to the seat(A), using bolt and washer(N).

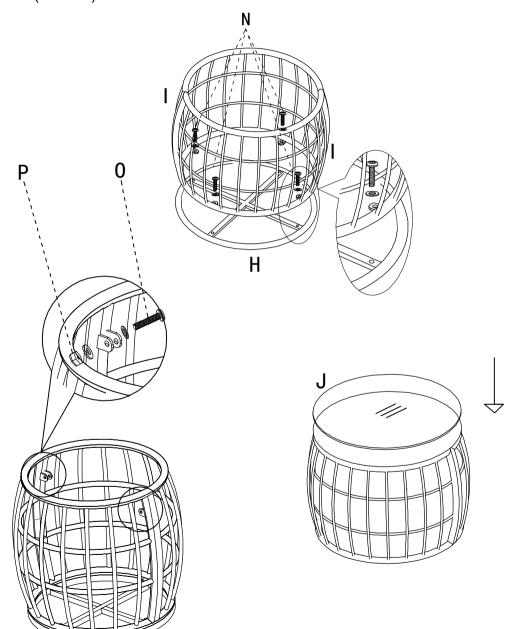


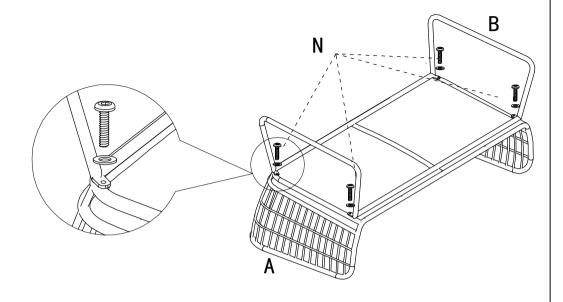

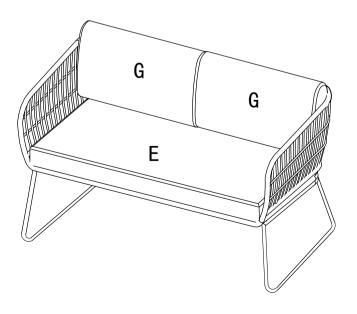

Do not fully tighten bolts until assembly is complete. Assemble the sofa leg(D) to the seat(C),using bolt and washer(N).

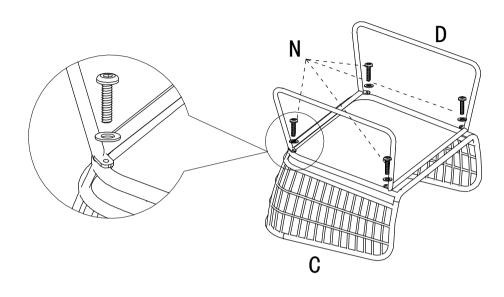

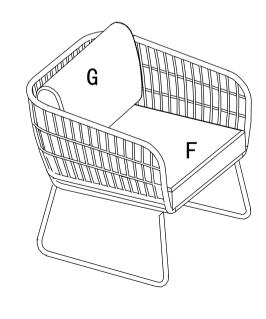

Do not fully tighten bolts until assembly is complete. Assemble the table leg(L) to the table top(K), using bolt, washer and $totok{nut}(N&O\&P)$.

