



Features:

1. LED Display
2. Time, Internal Celsius (°C) /Fahrenheit (°F) Temperature display
3. 12/24 hours selecting format
4. 3 Groups of Alarm with Bi, bi... sound
5. Display luminance adjustment L1-L2-L3
6. Sound control display (power save mode)
7. Power supply : 3x AAA 1.5V batteries (not included), or DC 5V/1A by USB cable (included)

Set the time and alarm time

The setting flow is YEAR>MONTH>DATE>12/24 HOURS FORMAT > HOUR > MINUTE > ALARM 1 ON/OFF > ALARM HOUR > ALARM MINUTE>ALARM2 ON/OFF>ALARM2 HOUR>ALARM2 MINUTE>ALARM3 ON/OFF> ALARM3 HOUR >ALARM3 MINUTE>SOUND CONTROL --:SD

Press and hold the SET button for 2 seconds to activate the setting

1. When year flashes, press **UP/DOWN** button to select correct year.
2. Press the **SET** button, when the month flashes, press **UP/DOWN** button to select correct month.
3. Press the **SET** button, when the date flashes, press **UP/DOWN** button to select correct date.
4. Press the **SET** button, when 12H flashes, press **UP/DOWN** button to select 12/24 hours status.
5. Press the **SET** button, when the hour flashes, press **UP/DOWN** button to select correct hour.
6. Press the **SET** button, when the minute flashes, press **UP/DOWN** button to select correct minute.
7. Press the **SET** button, the screen will indicate “- -: AL” and flashes, press **UP/DOWN** button to select the alarm **ON/OFF**.”
“**ON:AL**” : turns alarm mode on. “- -: AL”: turns alarm mode off.
8. Press the **SET** button, when the alarm hour flashes, press **UP/DOWN** button to select the correct alarm hour.
9. Press the **SET** button, when the alarm minute flashes, press **UP/DOWN** button to select the correct alarm minute.
10. Repeat the step 7-9 to set the ALARM 2 and ALARM 3
11. Press the **SET** button, the sound control will appear “--> Sd” > states the sound control function is off, press **UP/DOWN** button to turn on the sound control function, it will appear “**ON :Sd**”,the clock display light will turn off for about 15 seconds.
12. Press the **SET** button, exit the setting.

Using the 12/24 hour format

If the time is in 12 hour format, a dot “.” at the front and top left corner of the hour digit will be shown when the hours are advanced into PM time.

Using the alarm

When the indicator shows a dot “.” at the back and top right corner of the minute Digits, the alarm time is ON.

Not showing a dot “.” at the back and top right corner of the minute Digits: the alarm time is OFF.

When the alarm rings, press any button to stop it.

Set alarm fast

Press and hold **DOWN** button for 3 seconds, when the display shows :-- :A1, press the **DOWN** button again to select ON/OFF AL1, ON :A1 is **ON AL1** ;--:A1 is OFF AL1. Then press **SET** button to set AL1, the balance step is same with above step 7-9. The same with AL2 and AL3.

Display brightness

Press the **UP** button, when the indicator shows “L1”, press **UP/DOWN** button to select **L1/L2/L3**. The display dimmer will automatically turn dark during 18:00pm-6:59am.

Using the sound control display

Press the **DOWN** button, when the indicator shows “- -: Sd”, the sound control display is OFF, when the indicator shows “**on:Sd**”,the sound control display is ON.

Select the display way DP-1 or DP-2.

Press the SET button to select to select **DP-1** or **DP-2** display.

DP-1 is :Time-Month/date-Indoor temperature circulation display.

DP-2 is always TIME display.

Temperature °C and °F change

Press the UP button to change °C and °F for necessary.

Warning

- Do not use the product near flammable objects and heat sources.
- Do not use this product in high temperature or high humidity environments (such as bathrooms), this product has no waterproof function.
- Do not disassemble or modify the product.
- Handle the product with care. The product might break when its dropped