

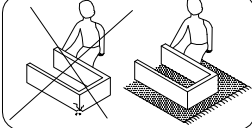
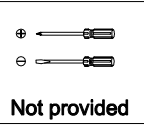
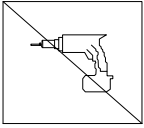
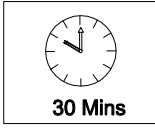
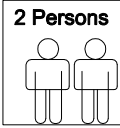
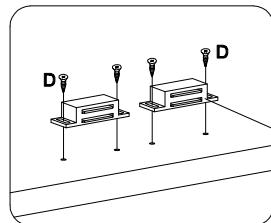


① x1	② x1	③ x1	④ x1	⑤ x1	⑥ x1	
⑦ x1	⑧ x2	⑨ x2	⑩ x4	⑪ x2	⑫ x2	
A x12	B x12	C x12	D x20	E x10	F x6	G x4
H x6	J x16	K x4	L x4	M x4	N x12	O x1
P x4	Q x4	R x2	S x2	T x2		

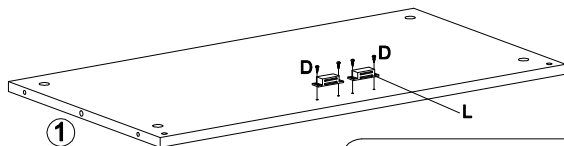


**1**

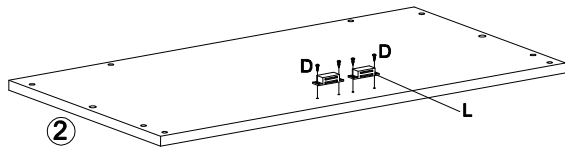


	x8		x4
--	----	--	----

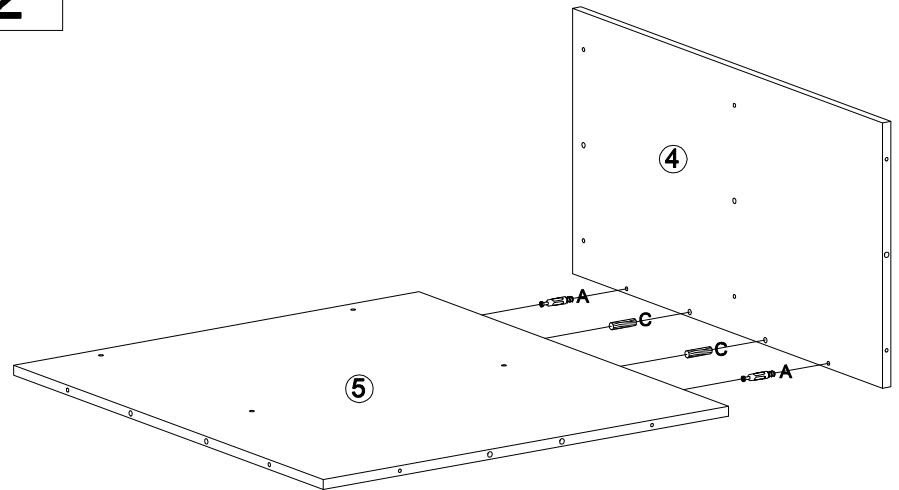


**2**




	x2		x2
--	----	--	----

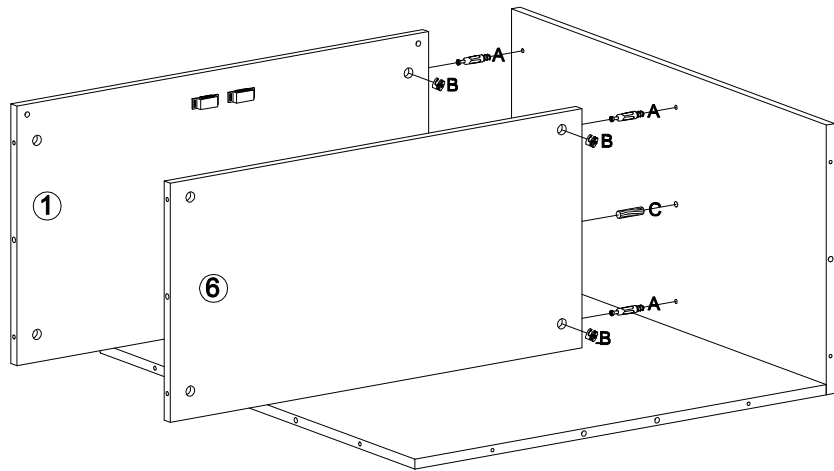


3




		
A x4	B x4	C x2

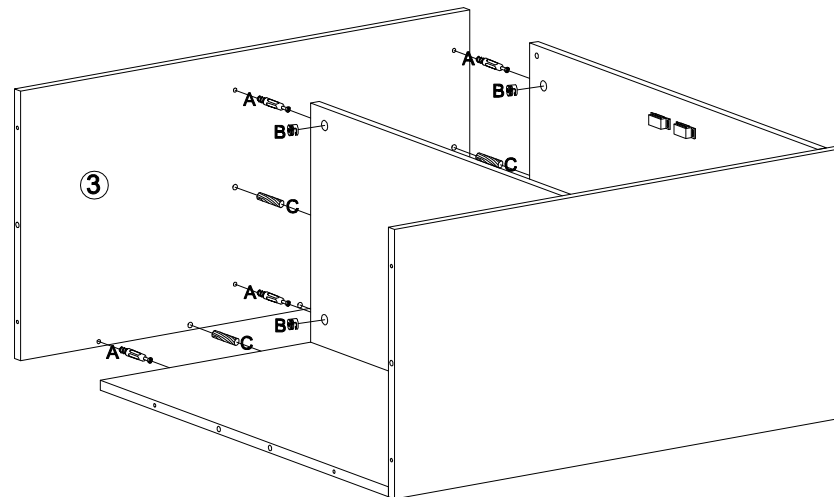


4




		
A x6	B x4	C x4

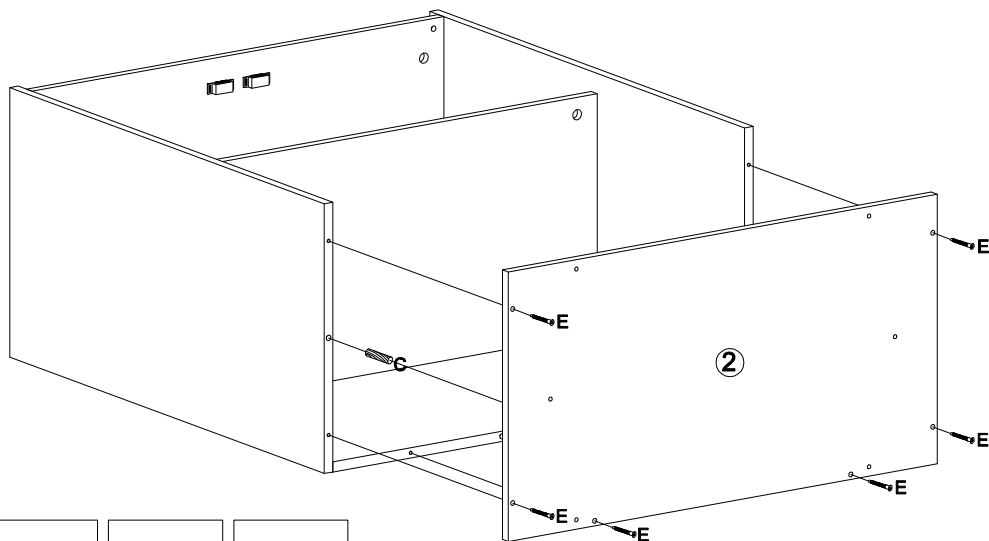

5




		
C x4	E x6	O x1

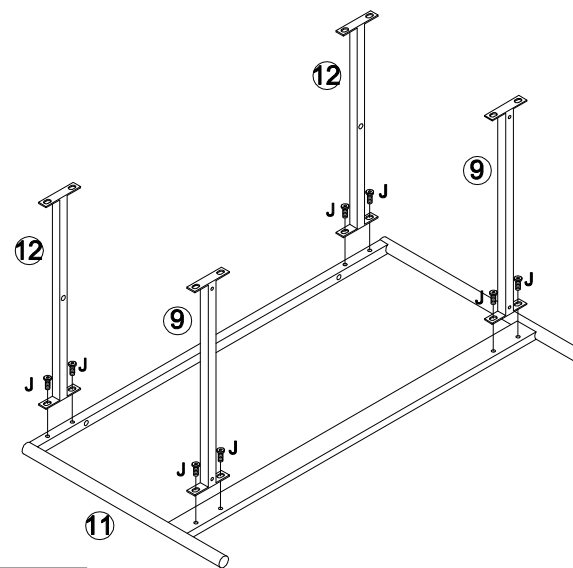6




	
J x8	O x1

7

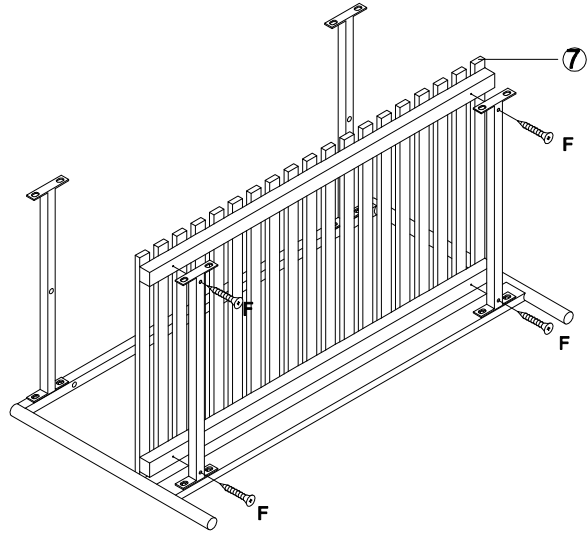

F x4

8

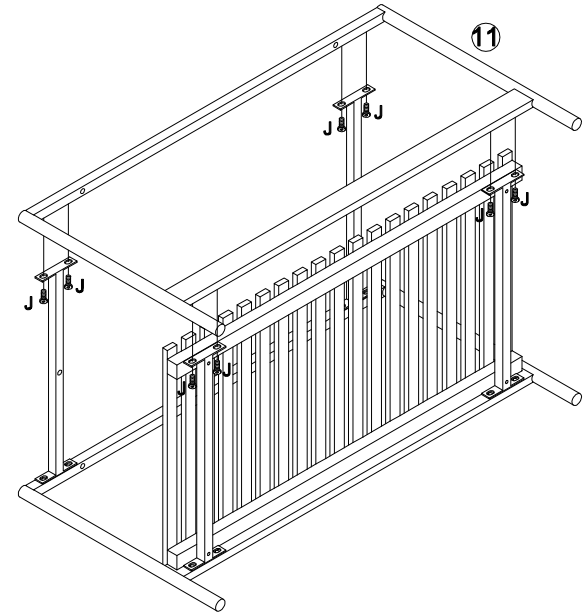


J x8



O x1

9

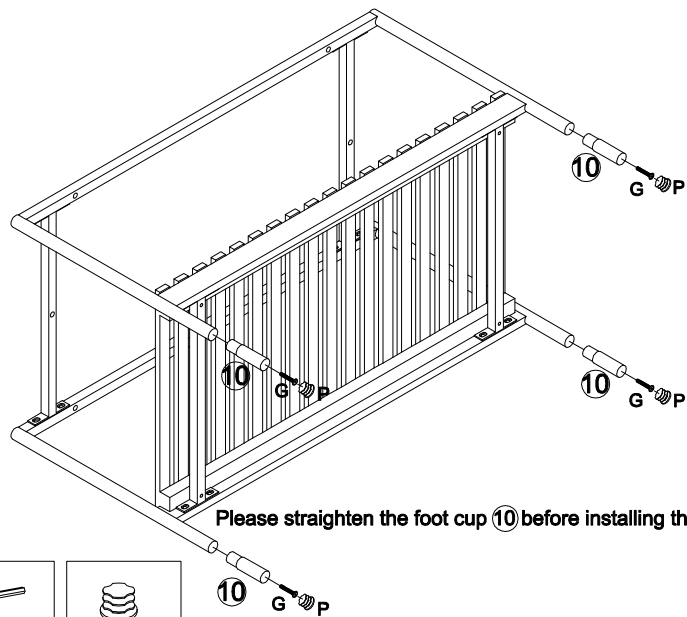

Please straighten the foot cup ⑩ before installing the screws G



G x4





O x1



P x4



10

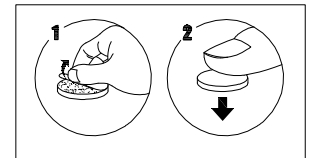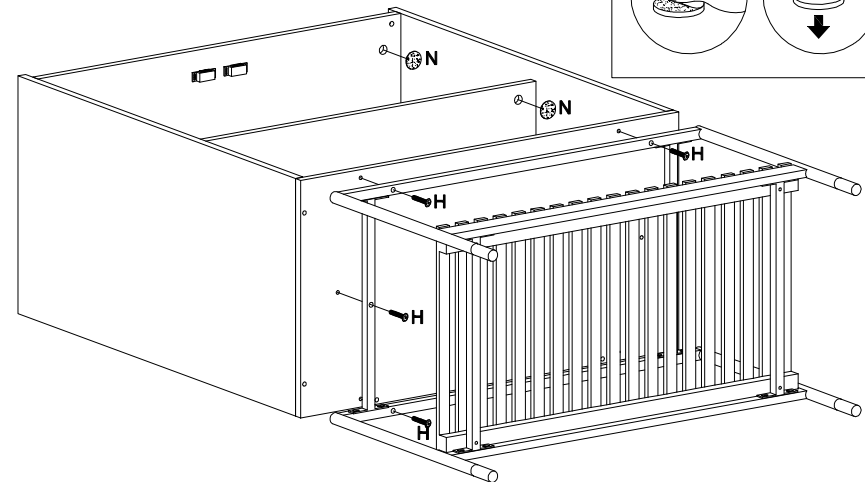

H x6







N x8






O x1



11

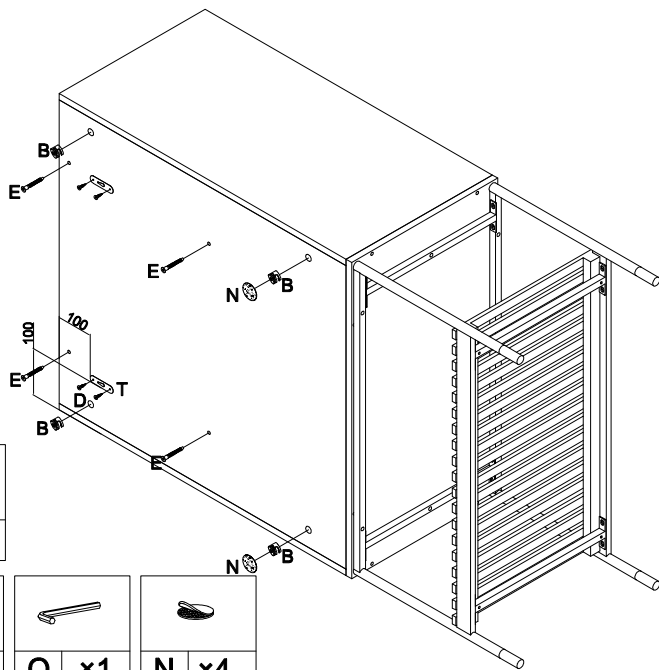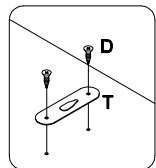

12 x2

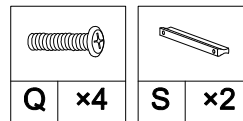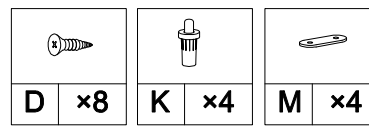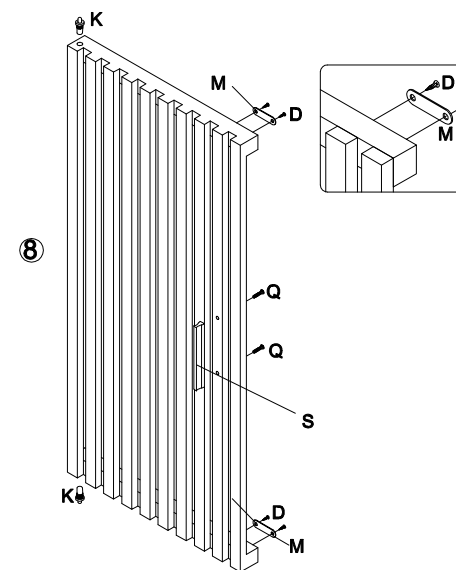

13

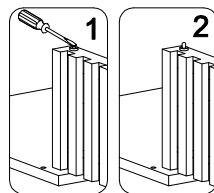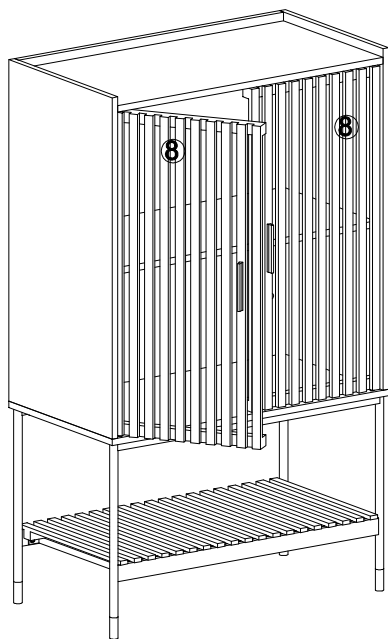

14

