


Assembly instruction

|
KANSO

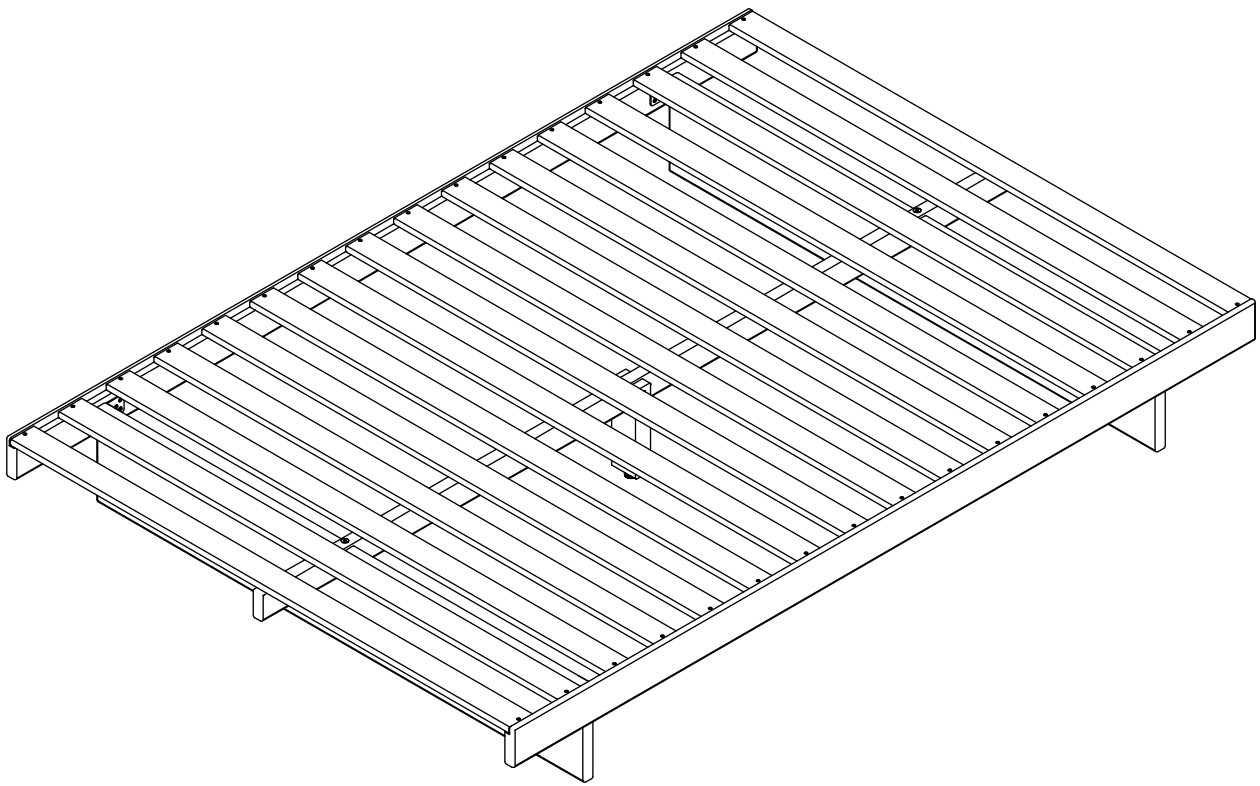



karup

DESIGN

karupdesign.com



FITTINGS

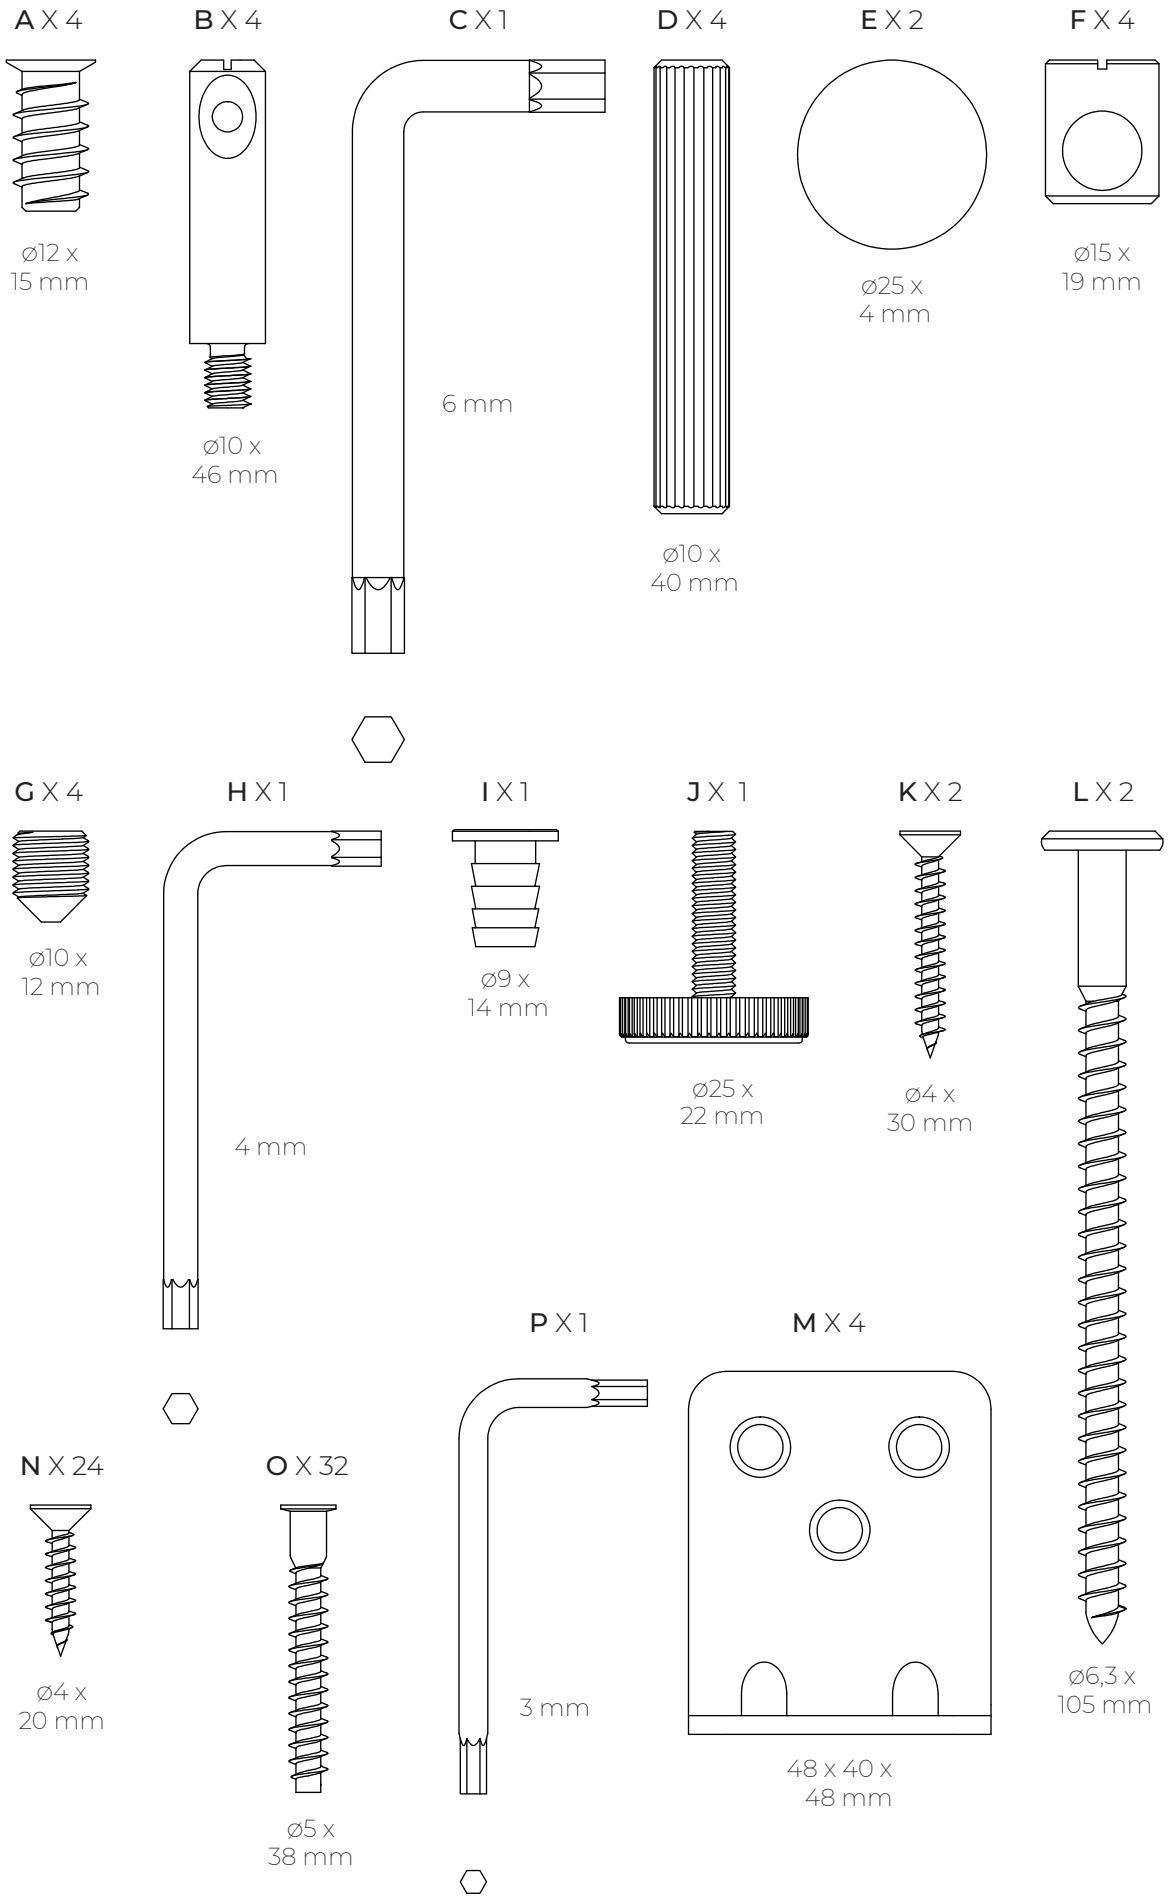


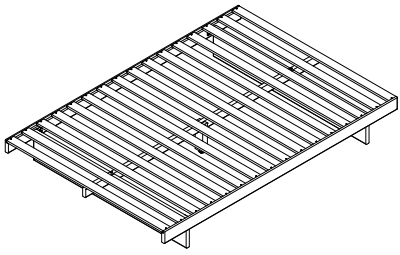


- 2 x **1**
- 2 x **2**
- 1 x **3**
- 1 x **4**
- 16 x **5**

16 X **5**

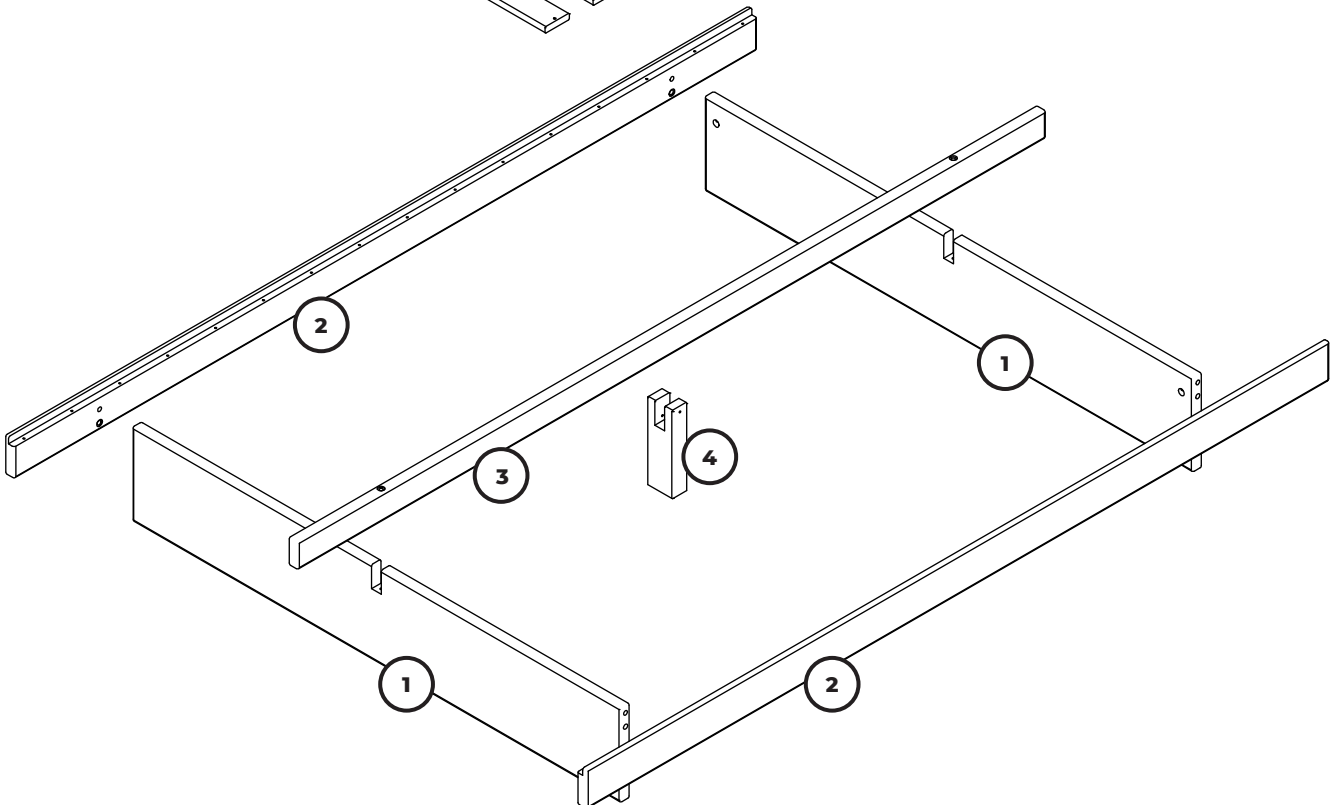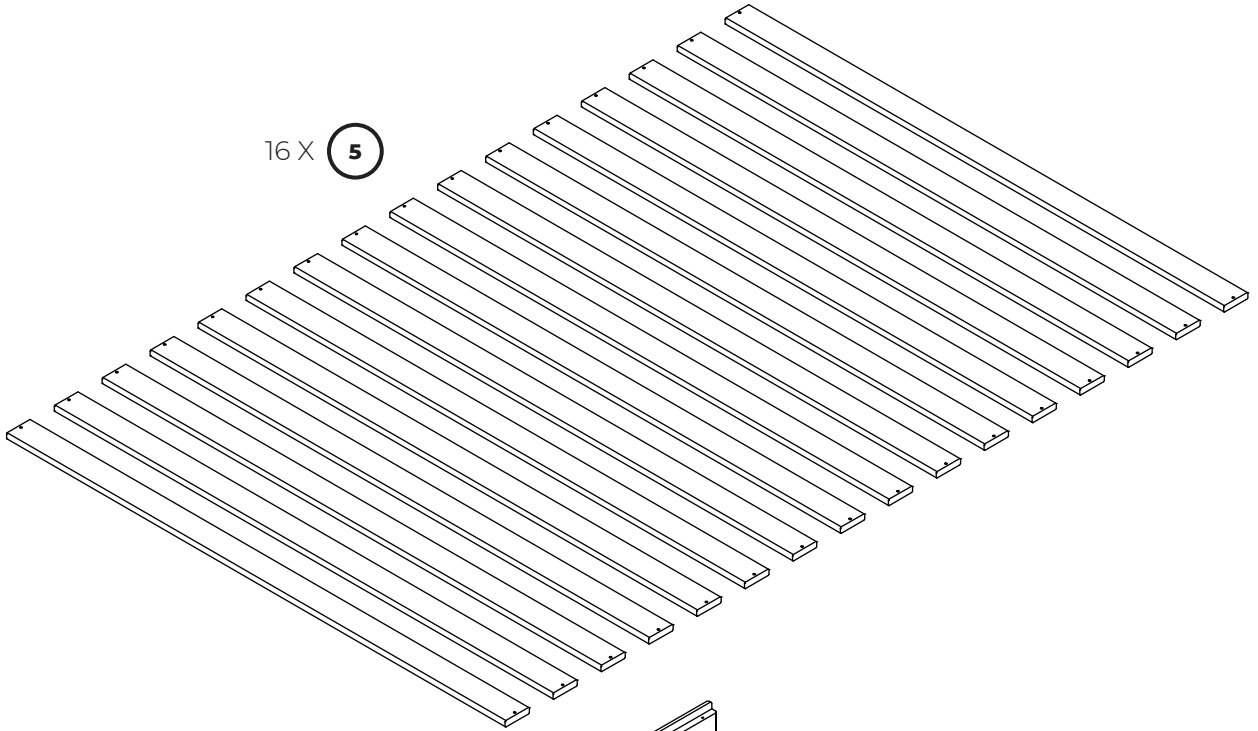

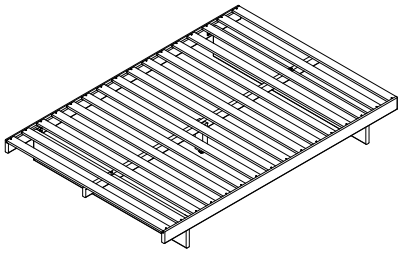


A X 4






B X 4




C X 1




D X 4

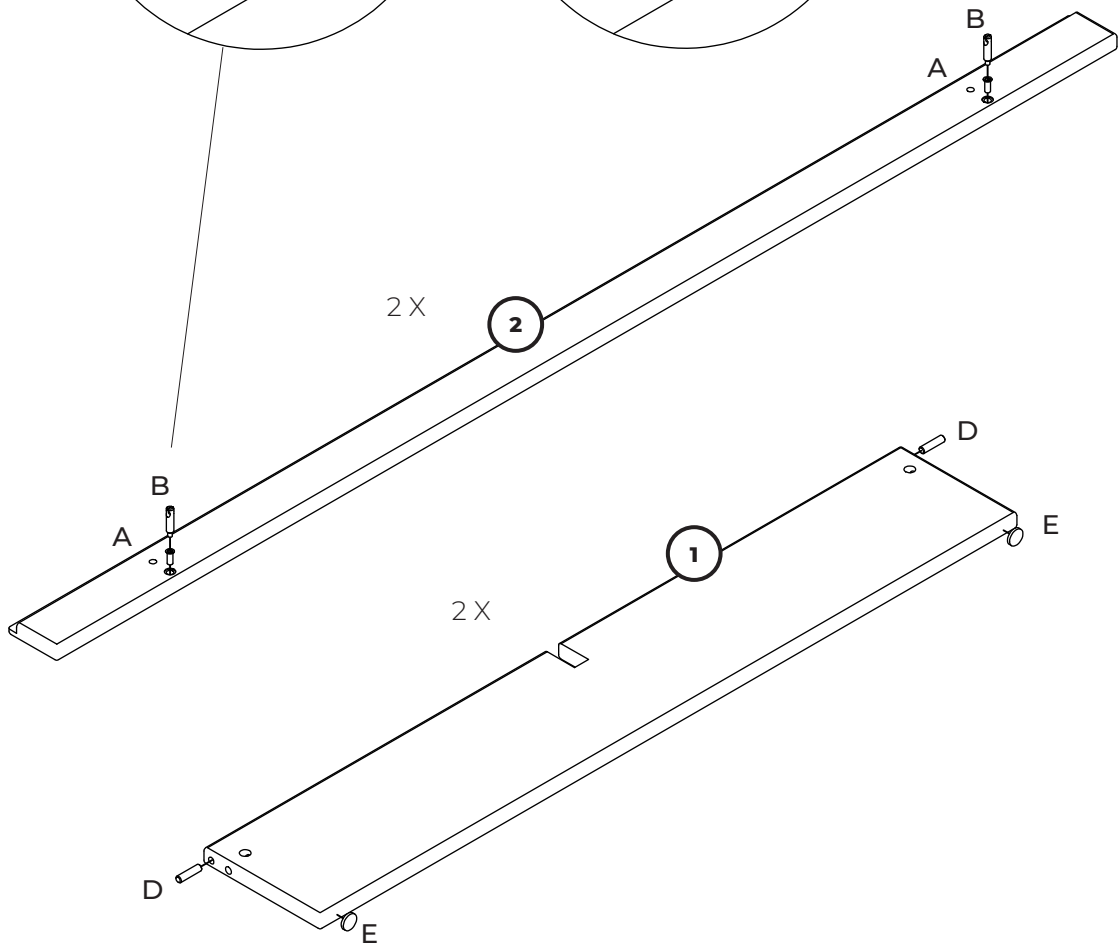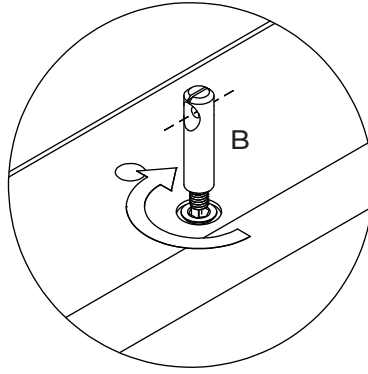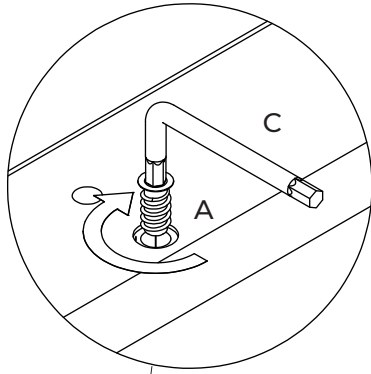

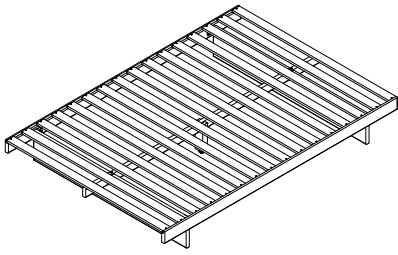





FX4











GX4



HX1

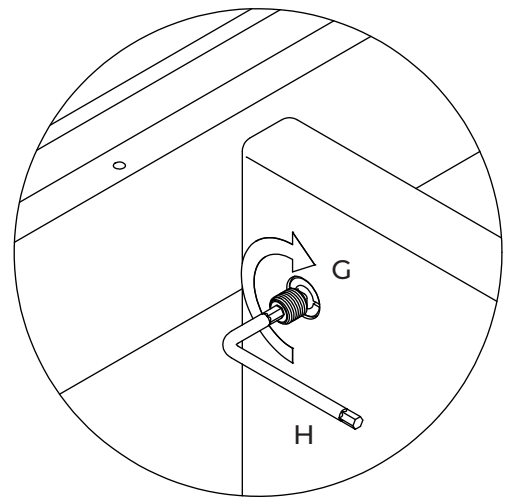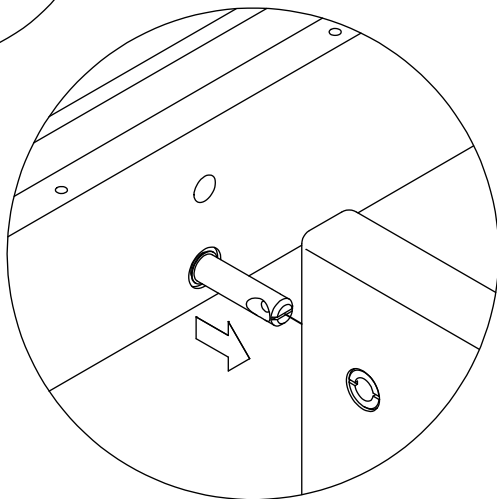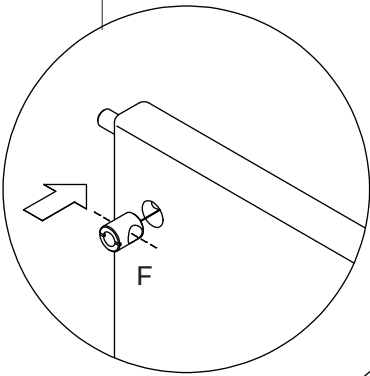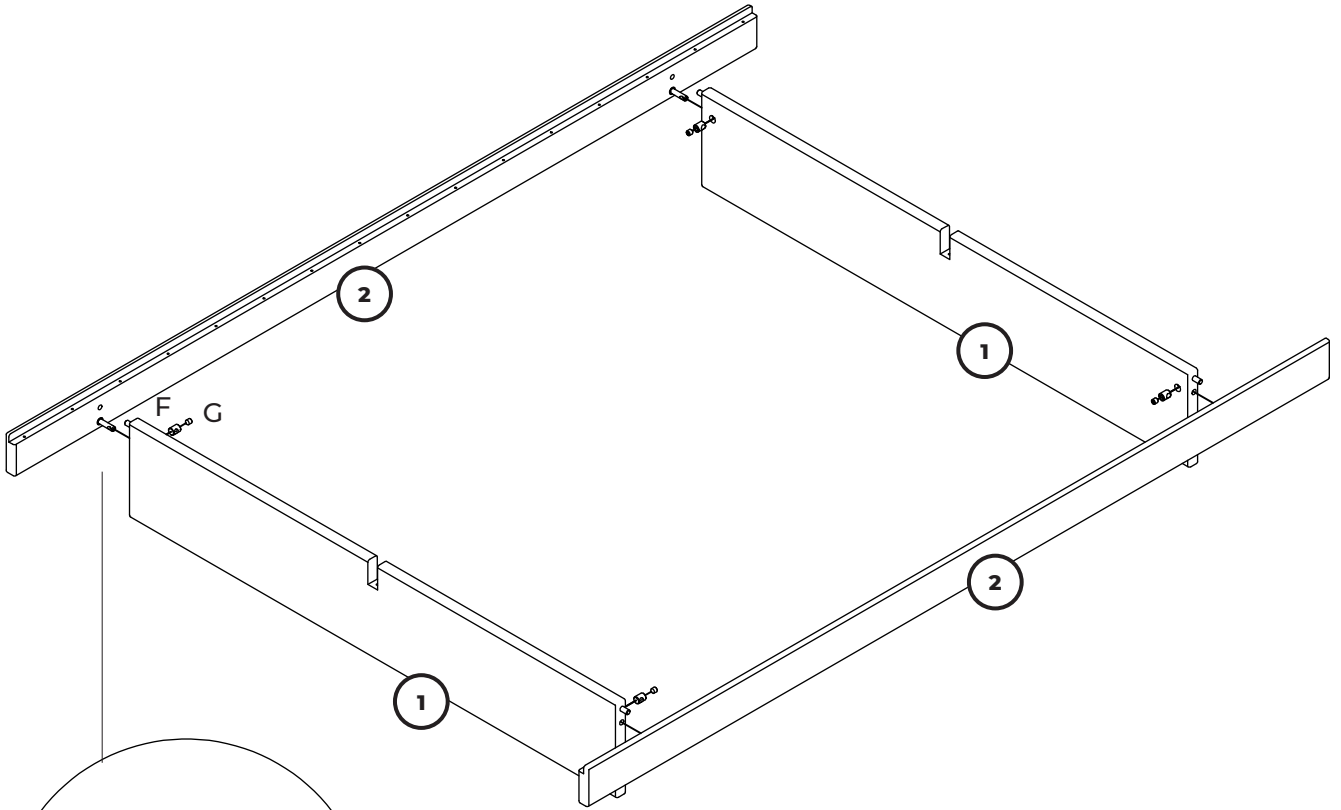

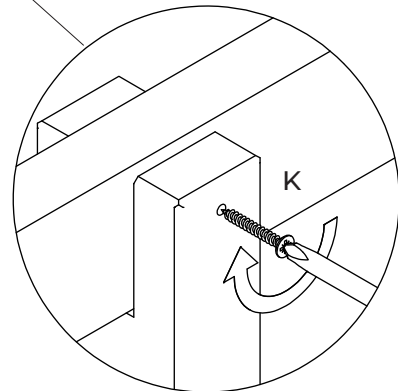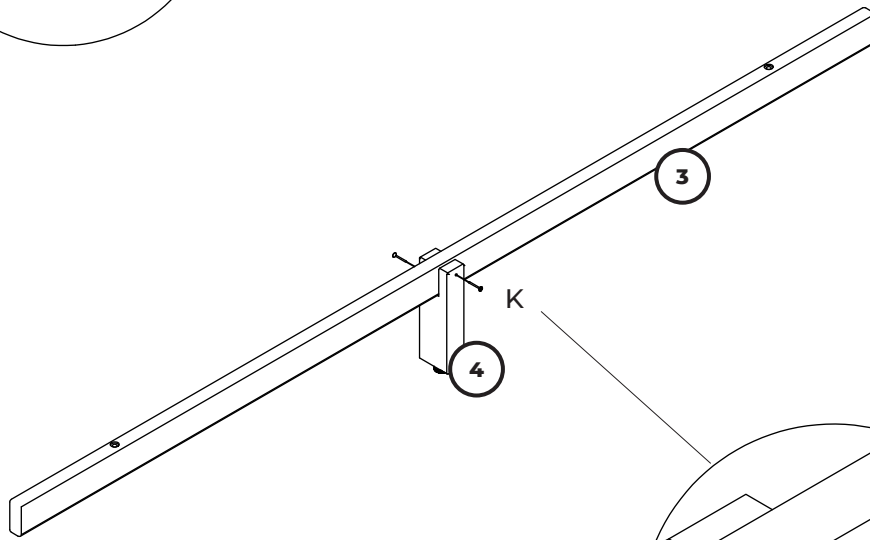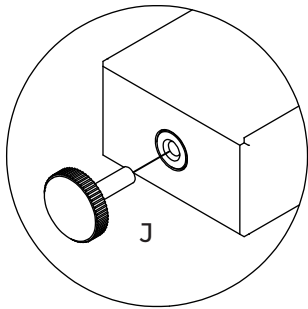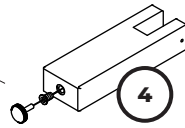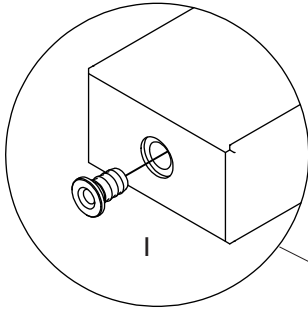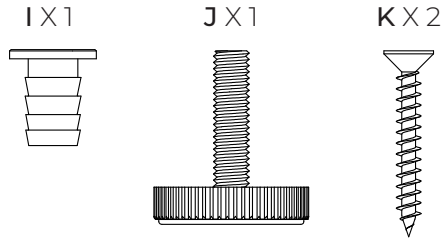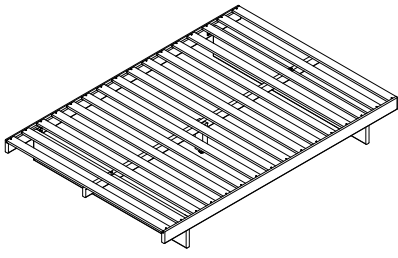


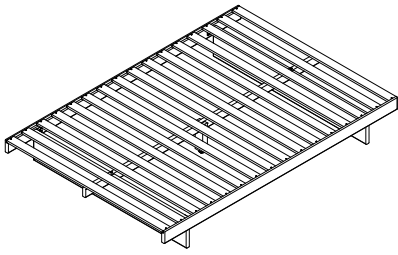

L X 2







M X 4

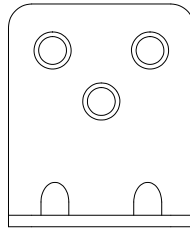


N X 24



H X 1

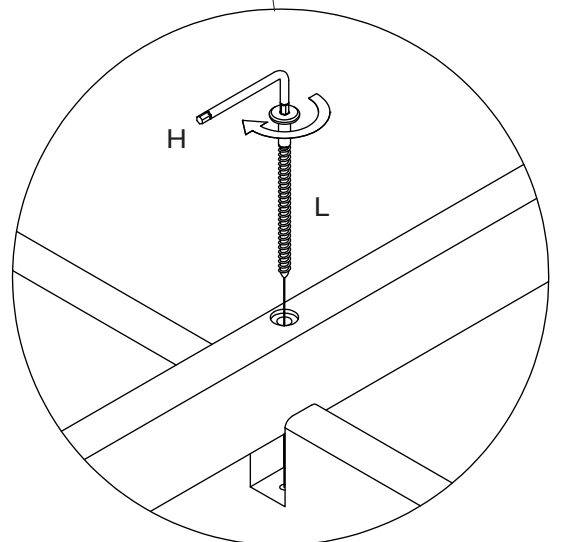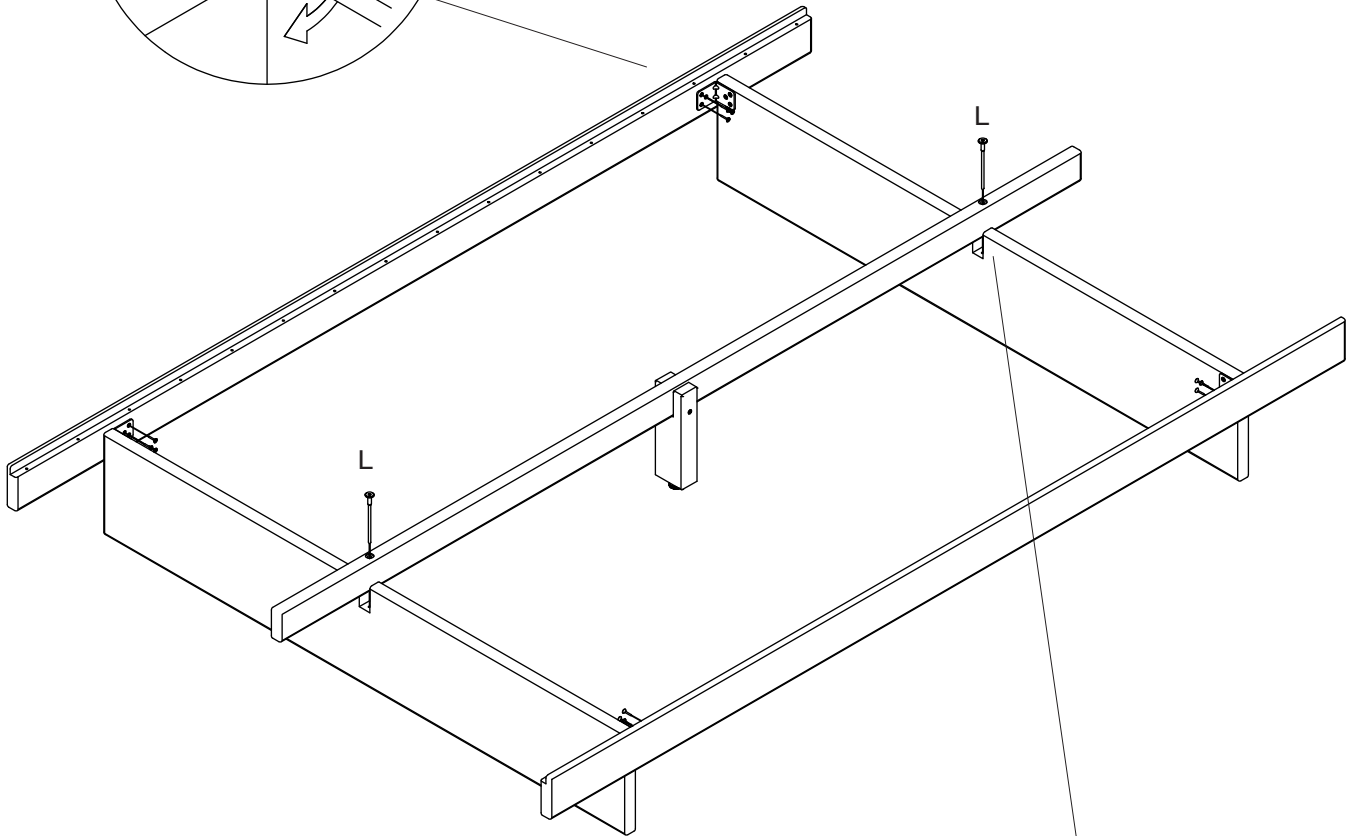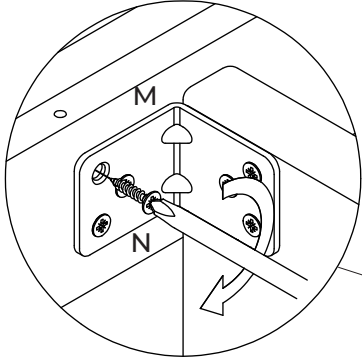

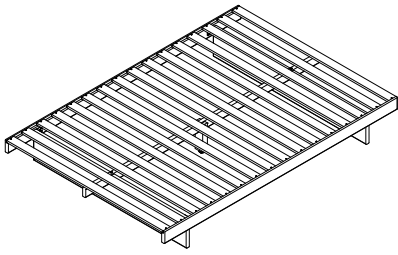

O X 32



P X 1

